




Montageanleitung / Mounting Instruction – GM engines

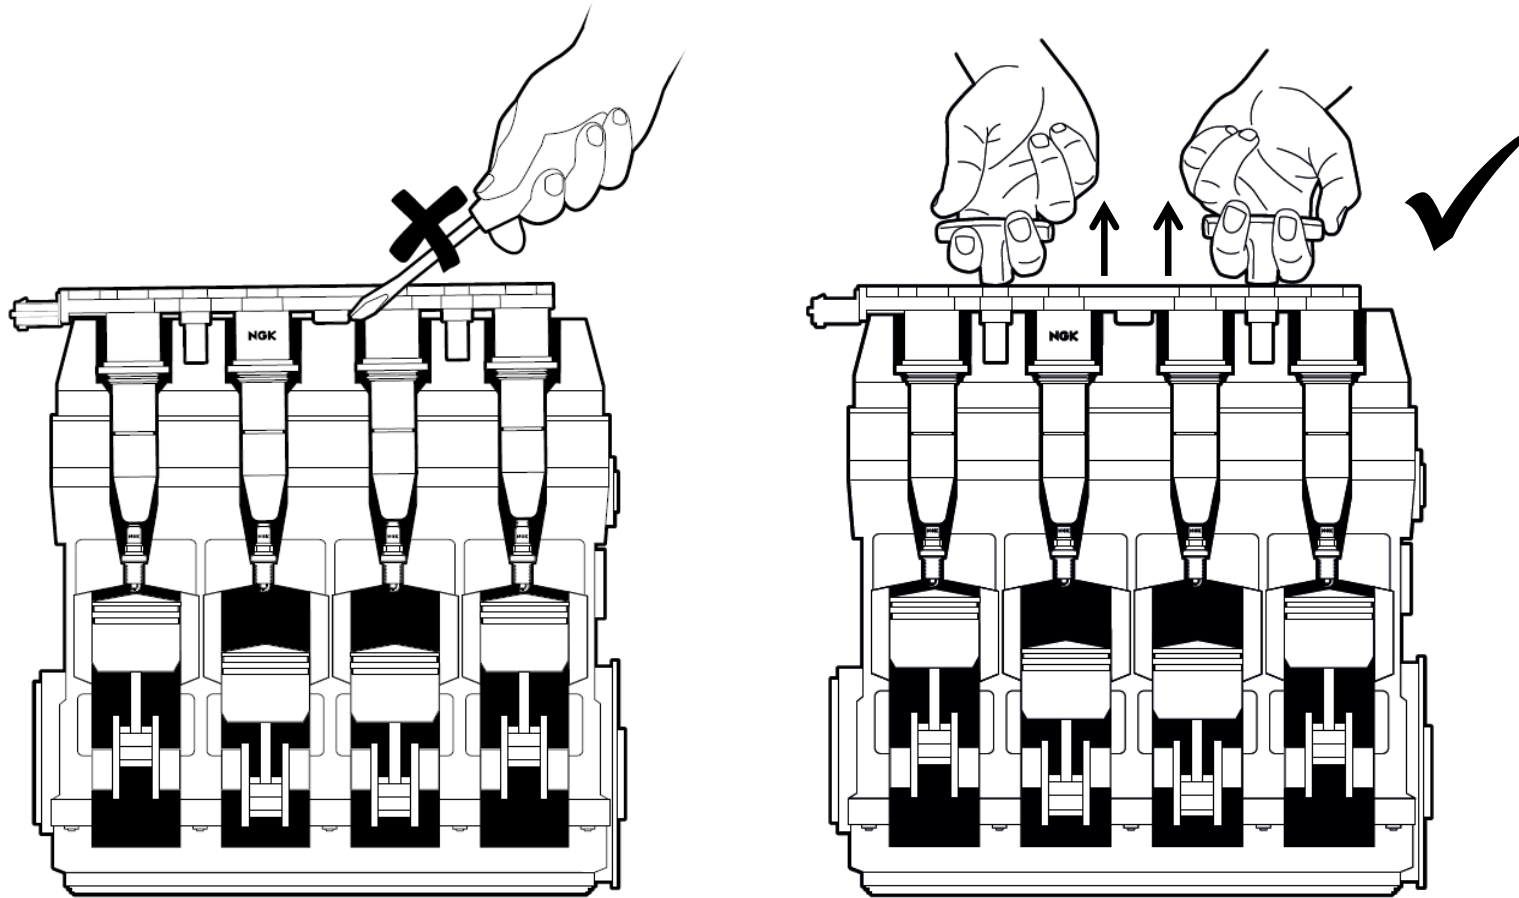

- Dismounting:

Do not bend the coil. Use KL-0127-85 by 

- Installing:

Tighten screws with max 8 Nm

Attention: Improper handling voids the warranty